



Motorola Xoom Wifi Display Replacement

This step-by-step replacement guide will help you remove the existing wifi display and, in the process, shows you the steps for putting on a new one.

Written By: William Prins



INTRODUCTION

As this replacement guide works on an internal component of the Xoom Wifi, completion of prior steps to remove external parts is necessary.



TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:


- [Motorola Xoom Display](#) (1)

Step 1 — Back Cover Disassembly

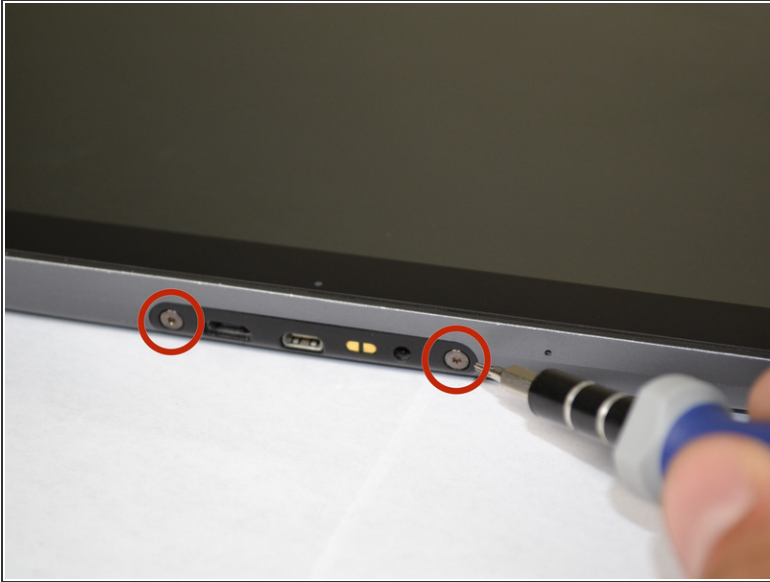



- There are two 6.6mm screws that hold ports into place as well as the back panel. Remove these with a T-5 Torx screwdriver.

Step 2

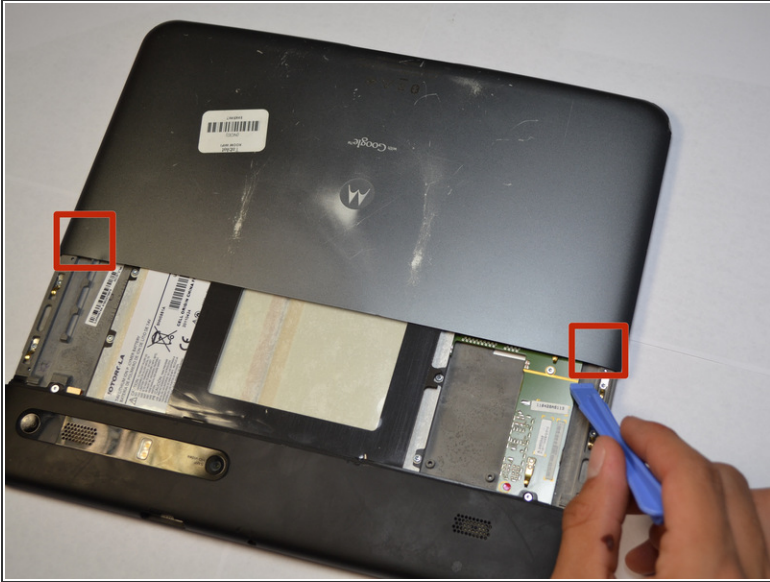



- Apply light pressure with hand and slide the back plate till it stops in this position.
- There is a flex clip on both sides that need to be pushed down in order for the plate to slide off completely. Use a plastic opening tool to release the flex clips. They are located under the back cover near the sides.
- As soon as the clips are released the back should slide off.

Step 3

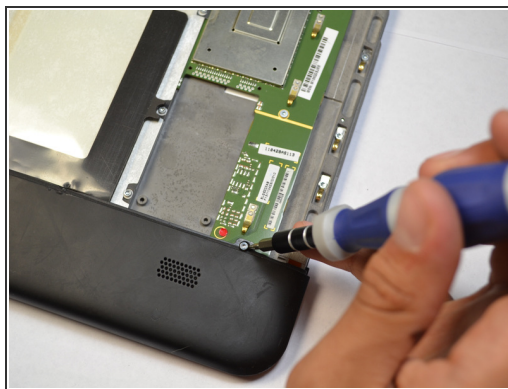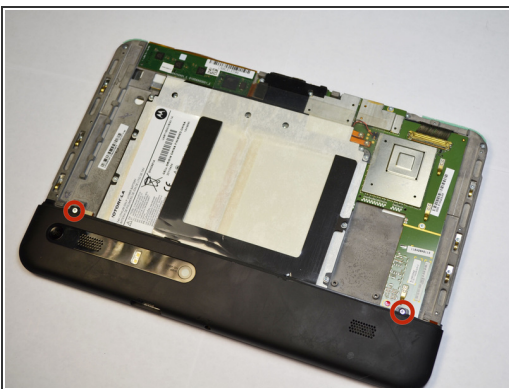



- Remove last two 4.2mm screws from the remaining back piece with a T-5 Torx screwdriver.
- Once both screws are taken out, lift the rest of the backing out of the way.

Step 4 — Battery

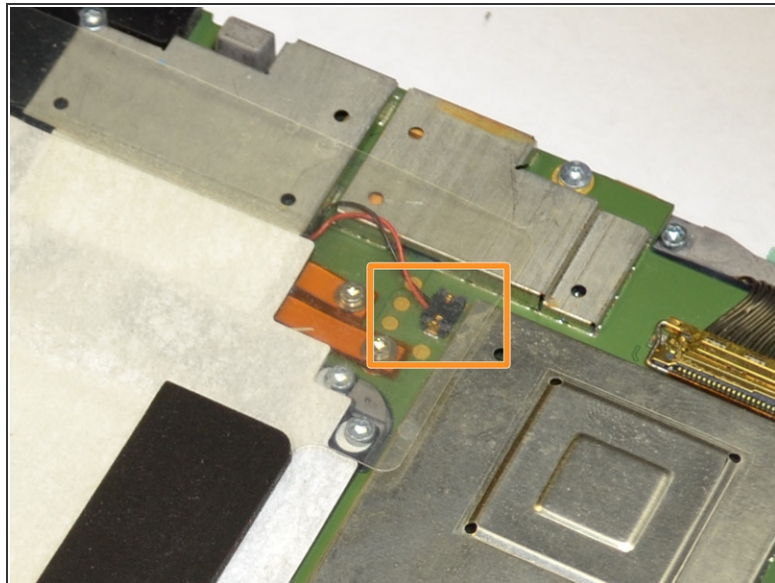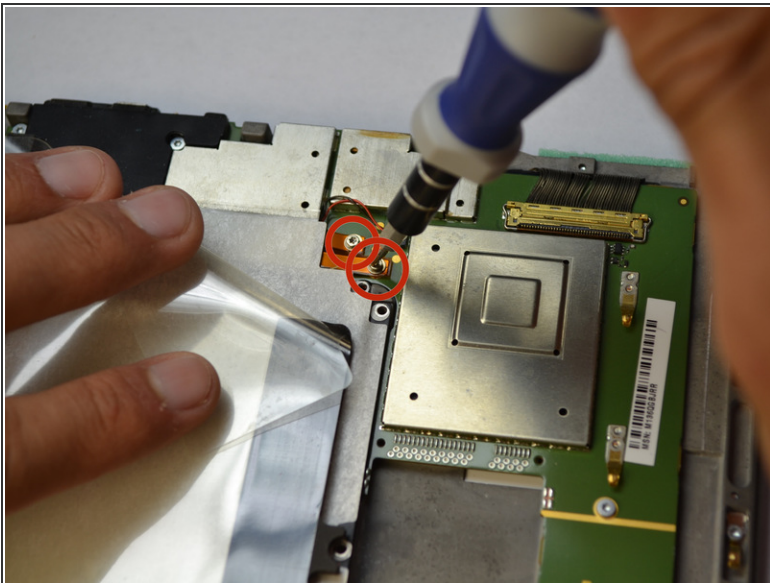



- Remove the two battery leads with a T-5 Torx screwdriver.
- Grab the red and black wires with your fingers and gently lift to disconnect black wire connector from the motherboard.

Step 5

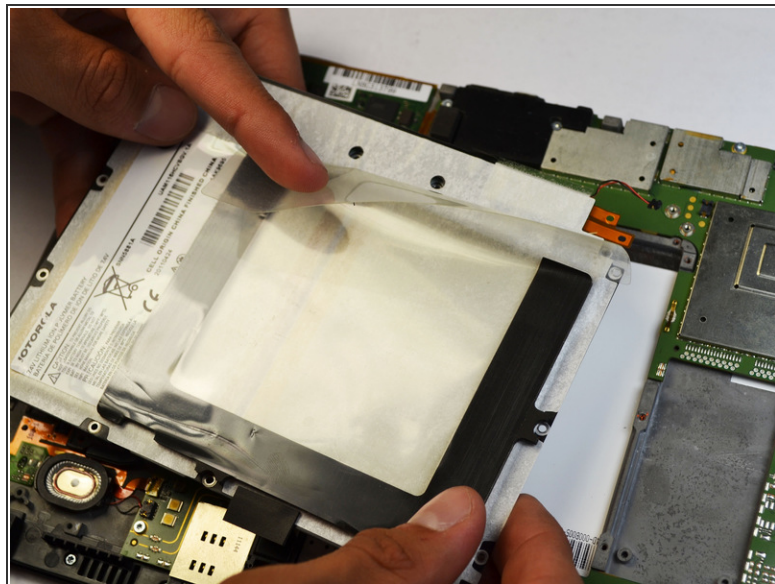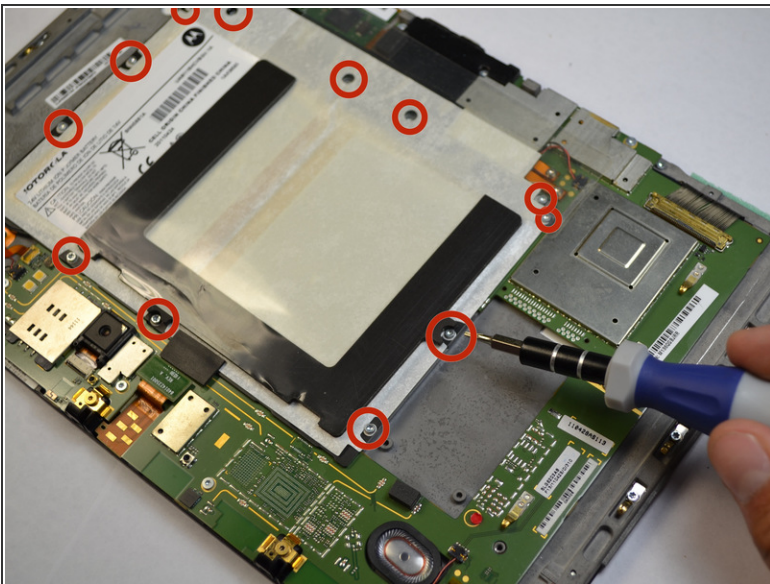




- All that holds the battery in are twelve screws. Remove them with a T-6 Torx screwdriver.
- The battery should lift out easily.

Step 6 — Speakers

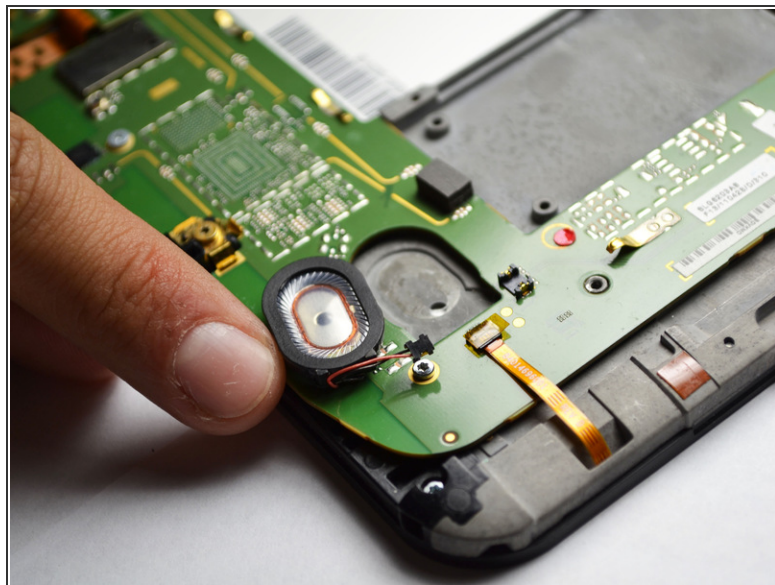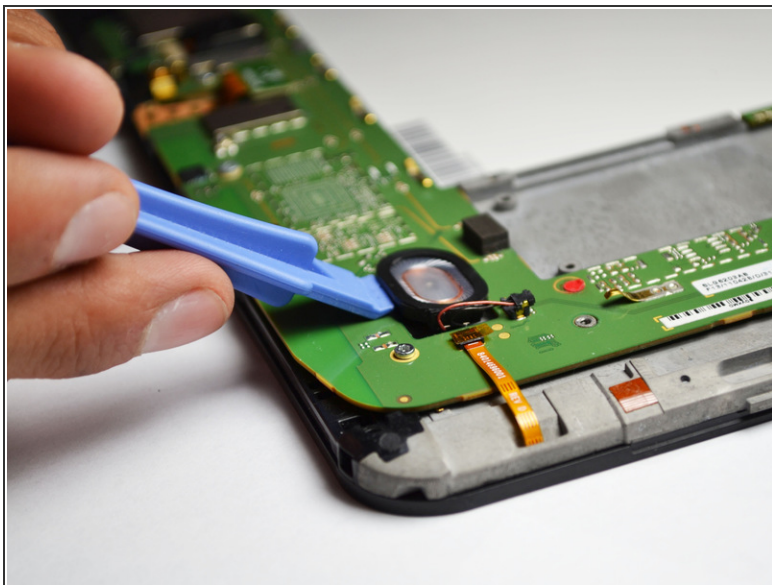



- Use a plastic opening tool to pop out the speaker. Make sure to carefully pull off the wire as well.
- Replace speaker if necessary.

Step 7 — Motherboard

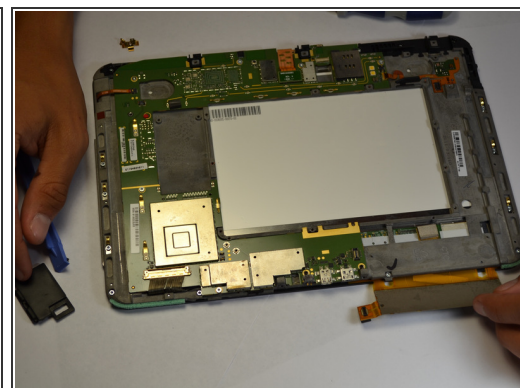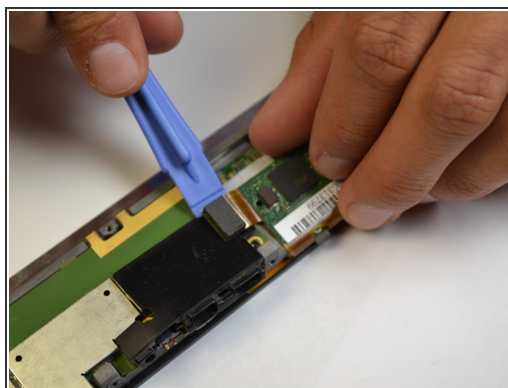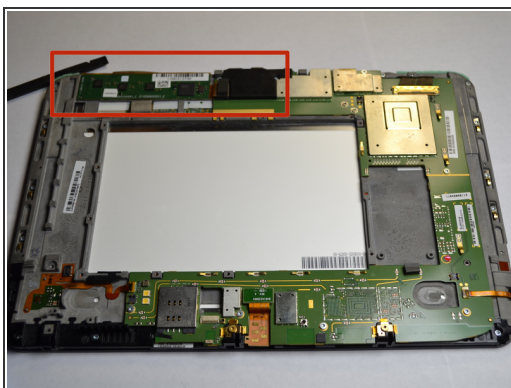



- Take a plastic opening tool and carefully pry off the touch screen controller connection.
- Be careful with the black cover under the connection.

Step 8

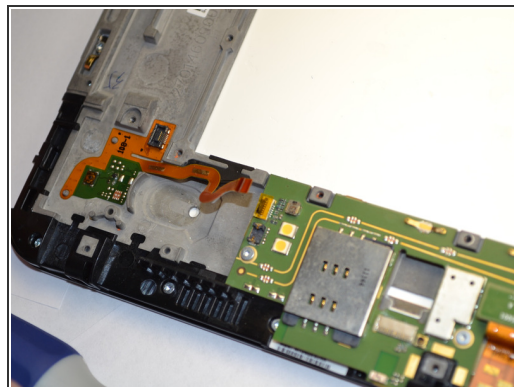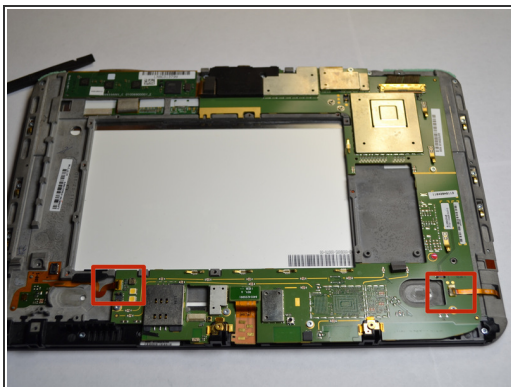


- There are two relay wires that must be disconnected.
- Pull both relay wires out of their connection ports.
- ⓘ Make sure to flip up the small black tab before you pull out the wire.

Step 9

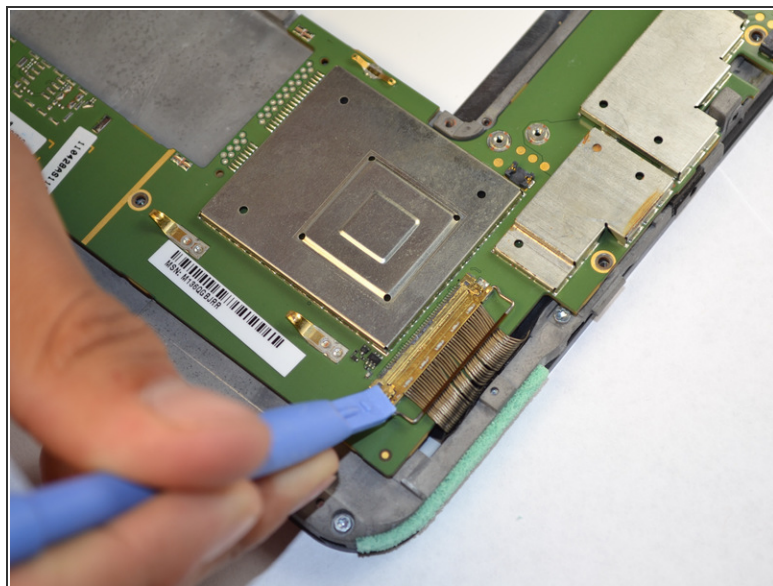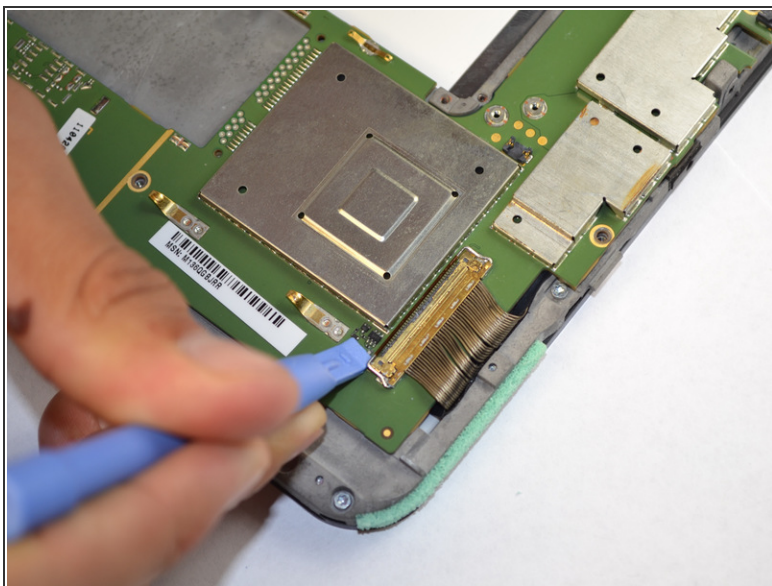


- Using a plastic opener, lift the metal bar clamping the wire harness to the motherboard.

Step 10

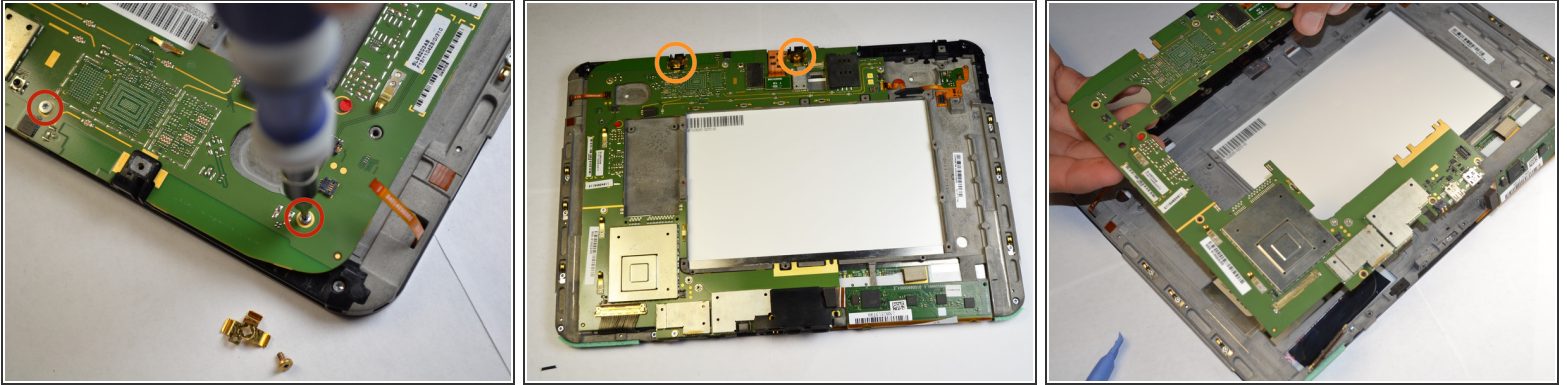


- There are eight 3.5mm screws that hold the motherboard in. Use a T-5 Torx screwdriver to take the screws loose. These screws are outlined in a gold color on the motherboard.
- Two gold colored screws with brackets are located in the orange circles. A T-5 Torx screwdriver is needed to take these 3.1mm screws.
- Motherboard should lift out easily and completely.

Step 11 — Display

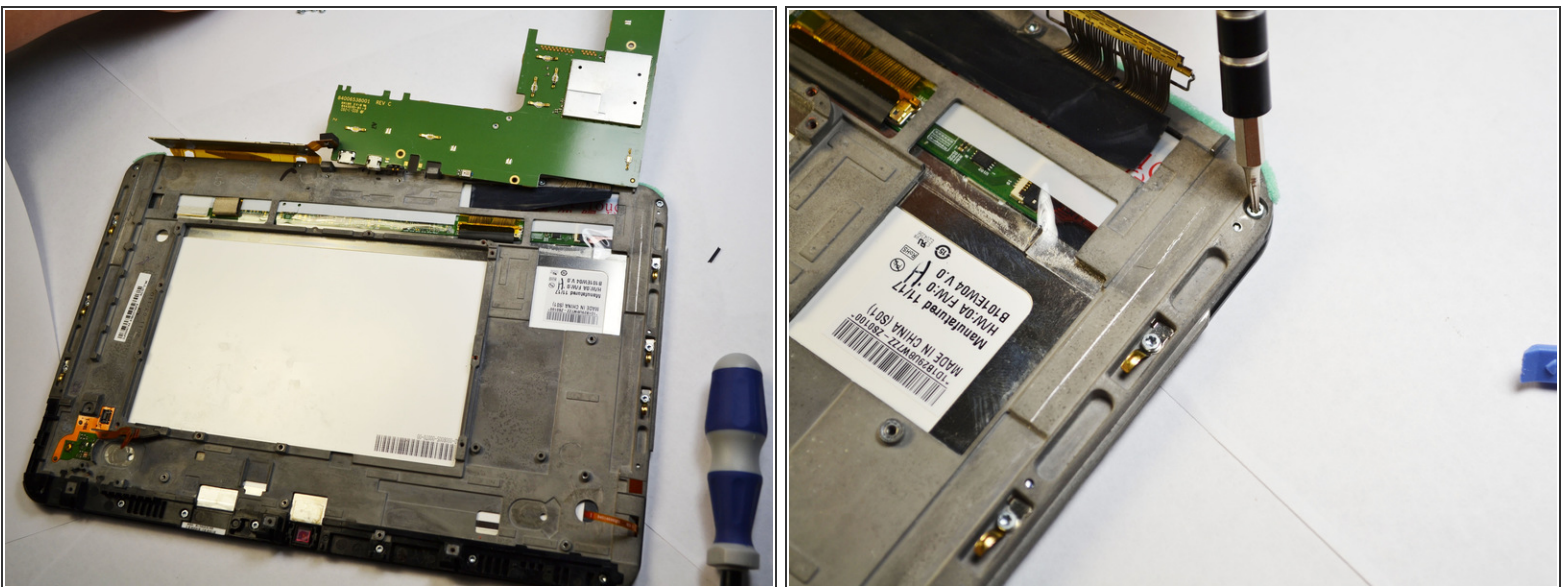

- Use a T-6 screw driver to take out 17-4mm screws. They are located around the perimeter of the tablet.
- Take the display out of the screen and the back panel.

Step 12

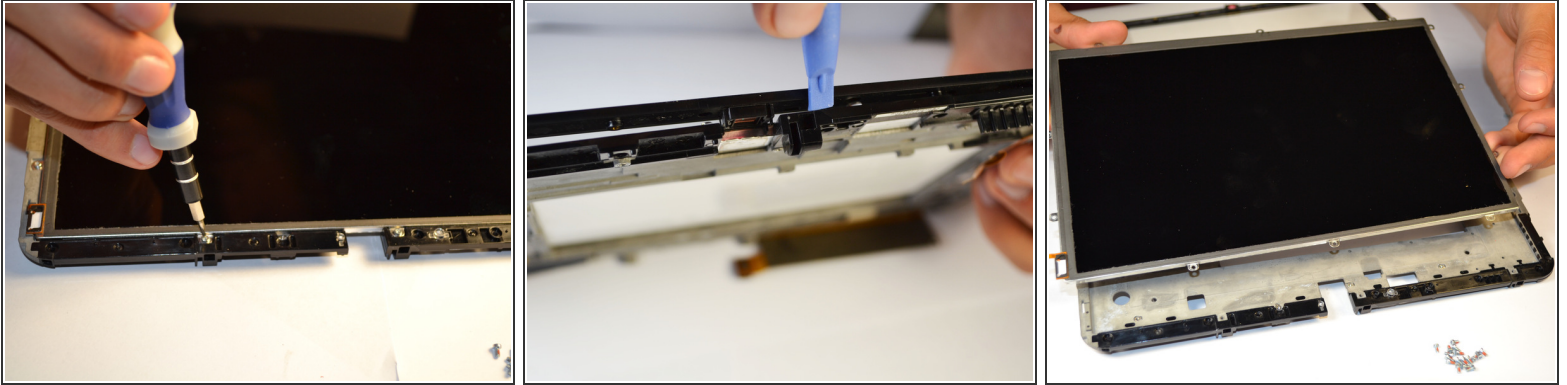

- Flip the display so it is facing up. There are screws around the outer edge of the display.
- A T-5 screwdriver will take the 12-4.1mm screws out.
- Use a plastic opening tool to carefully split the display case open. The display should come free.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 02:40:52 AM.